

7/16" Socket for Nylon Nut and a 7/8" Deep Socket for Mounting Nut or Open End Wrench.

ORDER OF INSTALLATION: (some parts sold separately)

Lock – Dust Cover – Finger Pull – Gasket – [Desired Lock Location] – Backing Plate – Mounting Nut – Governor – Tubular Cam – Nylon Nut

TUBULAR LOCK
SIZE MAY VARY



DUST COVER
SOLD SEPARATELY




FINGER PULL
SOLD SEPARATELY



RUBBER GASKET



BACKING PLATE
SOLD SEPARATELY

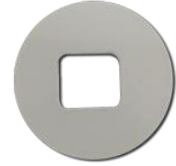

MOUNTING NUT



CAM GOVERNOR



TUBULAR CAM
SIZE MAY VARY



NYLON NUT



CAM ADAPTORS



ONLY NEEDED IF YOU ARE USING YOUR OLD CAMS WITH OUR LOCK

If none or some lock accessories were purchased, continue with the Order of Installation

EXAMPLE:



STEP 1 – Attach Dust Cover, Finger Pull, and Rubber Gasket over the Tubular Lock.

STEP 2 – Slide Step 1 pieces through compartment hole and attach the Backing Plate & twist on the Mounting Nut at the back of the lock to hold the pieces together.

STEP 3 – Place Cam Governor over the lock stud to fit flat against the back part of the lock.

STEP 4 – Attach Cam and tighten the Nylon Nut with a 7/16" Socket or Open End Wrench until it touches the cam.

CAUTION!

OVER TIGHTENING THE NYLON NUT CAN LEAD TO BREAKING OF THE LOCK STUD OR BINDING OF THE LOCK WHICH WILL PREVENT THE KEY FROM TURNING.

INDUSTRIAL LOCK & HARDWARE, INC.

40222 La Quinta Lane * Building B Unit 101 * Palmdale Ca. 93551

(800) 932-9490 Toll Free (only in the US) * (661) 224-1010 Direct * (661) 224-1011 Fax